



Intel NUC

USB Port Locations and Number Sequence

Front View

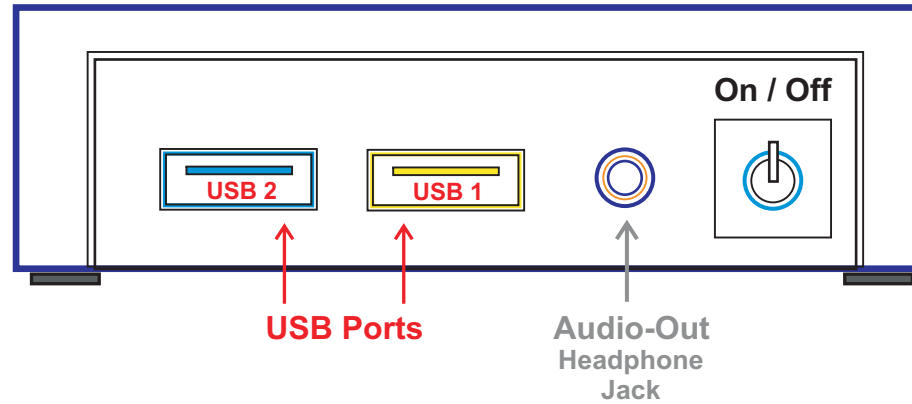

Rear View

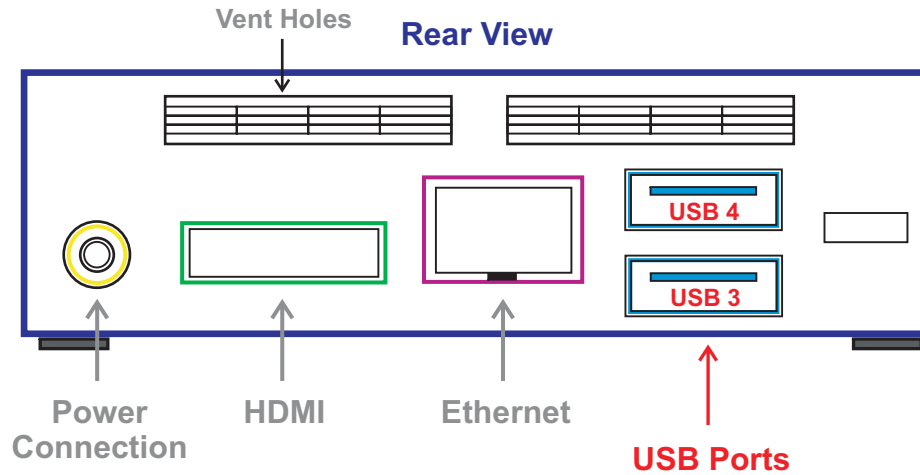

Note:

For use with:

- The WaveWare **SNAP** (Serial Network Alert Processor) **Standard** Model
- The WaveWare **STG** (SIP to TAP Gateway) For Both Rauland 5 and the 5K NC
- The WaveWare **MARS** (Mobile Alert Response System)
- The WaveWare **RMS** (Responder 5000 Messaging Server) For Rauland 5K NC

TITLE	Intel NUC USB Port Numbers and Locations Plus other Port Information and Views	DATE	6.4.18
		DWN BY	Bob Clyburn
WAVEWARE TECHNOLOGIES Garland, Texas 972-479-1702	DWG. NUMBER	REV.	1