



Lenovo - ThinkCentre

USB Port Locations and Number Sequence

Front View

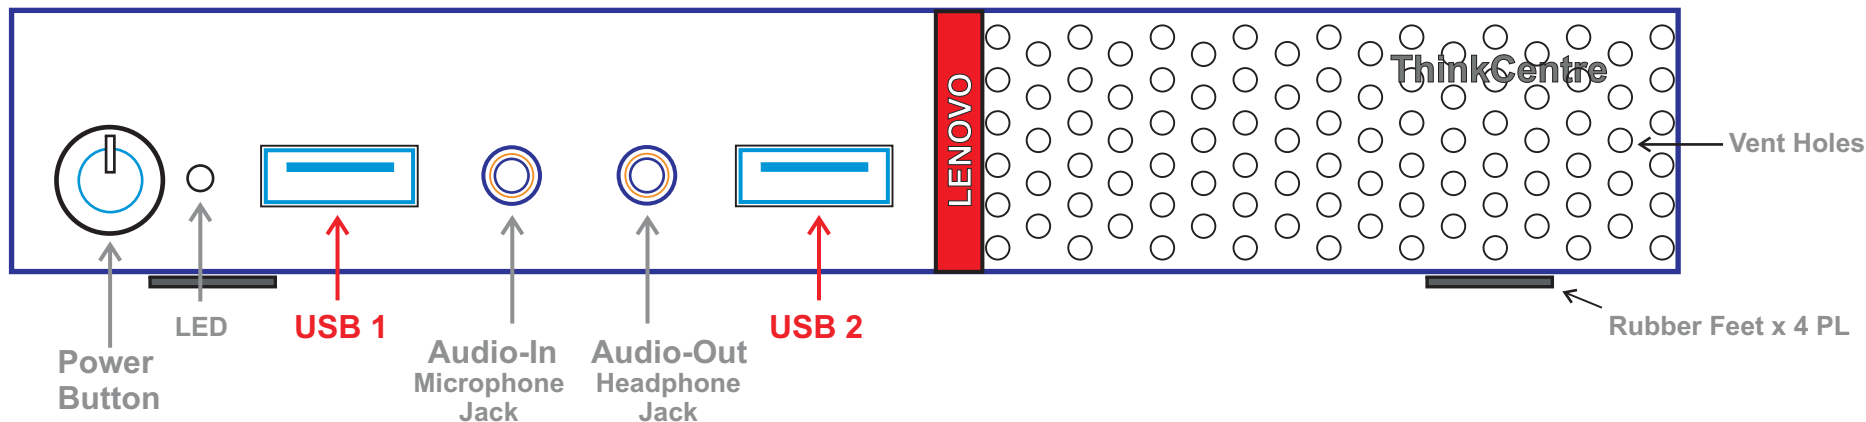

Rear View

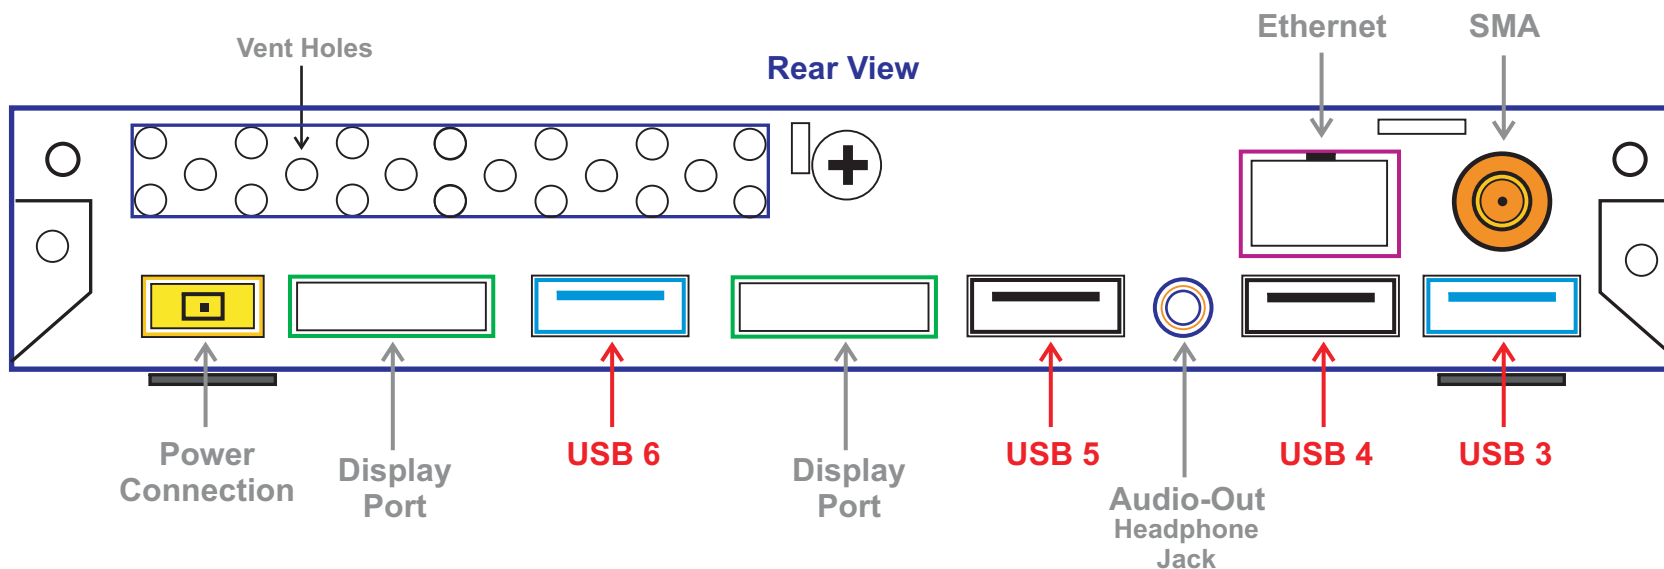

Note:

For use with:

- The WaveWare **SNAP** (Serial Network Alert Processor) **Standard** Model
- The WaveWare **STG** (SIP to TAP Gateway) For Both Rauland 5 and the 5K NC
- The WaveWare **MARS** (Mobile Alert Response System)
- The WaveWare **RMS** (Responder 5000 Messaging Server) For Rauland 5K NC

TITLE		DATE	
Lenovo - ThinkCentre		6.5.18	
USB Port Numbers		DWN BY	
Plus other Port Information and Views		Bob Clyburn	
WAVEWARE TECHNOLOGIES		REV.	
Garland, Texas		1	
972-479-1702		DWG. NUMBER	