



"Your Source for Pagers"



Apollo T-2000

Numeric Top Display Pager

User Guide

WaveWare Technologies, Inc.

Sales / Customer Service at: **1-800-373-1466**

Tech Support at: **1-800-373-1466 x109**

9726 Skillman St. Dallas TX. 75243

www.wirelessmessaging.com



Table of
CONTENTS

“Your Source for Pagers”

Control Buttons	1
Features and Functions.....	2
LCD Display	3
Function Operation.....	4- 9
Power ON / OFF.....	4
Set Alert.....	4
Message Mode.....	5
LCD Backlight.....	5
Duplicate Message Indicator.....	5
Locking and Unlocking Messages.....	6
Erasing a Message.....	6
Erasing ALL Messages.....	6
Set Time and Date.....	7
Set Alarm.....	7
Directory.....	8
Battery Information.....	8
Canned Messages.....	9

WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: **1-800-373-1466** Tech Support: **x109**




“Your Source for Pagers”

Control Buttons

Model: Apollo T-2000

Control Buttons

TOP DISPLAY

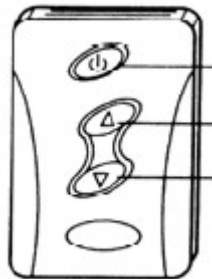

READ

MODE

SELECT / LIGHT

WaveWare Technologies, Inc. www.wirelessmessaging.com

Customer Service: **1-800-373-1466** Tech Support: **x109**



Features and Functions

“Your Source for Pagers”

- 2-Line, 42 English Alpha Character Memory
- Back-Lit Display
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory: 10 sets
- Mail Drop: 10 Sets
- Time / Month / Date / Year Display
- User Selectable 12 / 24 Hour Clock
- Message-In Time Indication
- Incomplete Message-In Indication
- Duplicate Message Indicator
- Message Lock
- All or Individual Message Delete
- Unread Message Indicator
- Manual On / Off Operation
- Low Battery Alert / Display
















WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: **1-800-373-1466** Tech Support: **x109**



LCD Display

“Your Source for Pagers”

LCD Display

- | | |
|--|--|
|  Day of the Week |  Duplicate Message |
|  Message Number |  Low Battery Alert |
|  Time Set Indicator |  Message Lock |
|  Beep Alert |  Message Continued |
|  Vibrate or Sleep Alert |  Out of Service Area |
|  Music Alert |  Delete Message |
|  Alarm |  A.B.C.D Tone Display |
|  Telephone Directory | |

WaveWare Technologies, Inc. www.wirelessmessaging.com

Customer Service: **1-800-373-1466** Tech Support: **x109**



Power On / Off
Set Alert

“Your Source for Pagers”

POWER ON:

Press and release the “READ” button. The pager alerts as it powers up. Now the pager is on standby.

POWER OFF:

Press “MODE” button until OFF appears in the LCD window. The Press “SELECT” button. When the pager is off, current time and alarm functions work normally. All messages that were received prior to turning the unit off will remain in memory.

SET ALERT:

The pager has 3 standard alert modes; you can select one mode among audio (beep or music), vibration or sleep (no alert) with the “MODE” button while the pager is on.

Audible Alerting: When the pager is initially turned on, it is automatically set to a AUDIO alert. To change this alert to another beep or melody, press the “MODE” button until “SET ALERT?” is displayed on the LCD. Press the “SELECT” button once and the pager displays “AUDIO?”. Choices include MUSIC melodies 1-10 and BEEP alerts 1-4. Press the “SELECT” button again and the pager will display the current alert choice. By pressing “MODE” button, you can scan the 10 music melodies and 4 beep alerts. Choose the desired alert by pressing “READ” button.

Vibration and Sleep alerts: VIBRATION will silently alert you while SLEEP alert emits no alert at all. To set, press the “MODE” button until “SET ALERT?” is displayed. Press “SELECT” button once, then the “MODE” button until the pager displays “SILENT?” on the display for vibration, or “SLEEP?” for no alert. When you make your selection, press the “READ” button.

**WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: 1-800-373-1466 Tech Support: x109**



“Your Source for Pagers”

Message Mode
LCD Backlight
Duplicate Message Indicator

MESSAGE MODE:

When a message is received, the pager displays “1 Page” on the LCD and depending on the alert mode selected:

BEEP – emits a 16 second beep alert

Music – melody plays twice

Vibration – 8 second vibration

Sleep – no alert.

To stop any alert, press any button.

Reminder Alerts: If no button is pressed after a message is received, a reminder alert will emit every 2 minutes (except in sleep mode).

To read a message: Press the read button to read a message. If the message is continued the mark “>” displays. To continue, press the “READ” button again. Date and time are stamped on each message received.

LCD BACKLIGHT:

When needed, pressing the “SELECT” button can activate a backlight. The light will automatically shut off in 20 seconds after no activity, or press the “SELECT” button again to turn the light off.

DUPLICATE MESSAGE INDICATOR:

Messages received more than once will be marked with a message indicator symbol.

**WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: 1-800-373-1466 Tech Support: x109**



“Your Source for Pagers”

Locking and Unlocking Messages Erasing One or ALL Messages

LOCKING:

Locking a message can help prevent the accidental deletion of a message. Up to 8 messages can be locked at a time. Using the “READ” button, select message to be locked. Press the “MODE” button until the lock symbol appears at the top of the display, then press the “SELECT” button. Message has been locked and cannot be deleted unless unlocked.

UNLOCKING:

To unlock a message, using the “READ” button, select the message to be unlocked. Press the “MODE” button once to remove the lock symbol. Message can now be deleted.

TO ERASE ONE MESSAGE:

Using the “READ” button select the message to be deleted. Press the “MODE” button until the scissors symbol appears at the top of the display, then press the “SELECT” button to delete the message.

TO ERASE ALL MESSAGES:

In standby mode, while not viewing any messages, press the “MODE” button twice until “CLEAR ALL?” appears in the display. Press the “SELECT” button once. All unlocked messages are now deleted.

NOTE:

The locked messages are not deleted in “CLEAR ALL” mode. To delete all messages in the “CLEAR ALL” mode, first unlock any locked messages.

WaveWare Technologies, Inc. www.wirelessmessaging.com

Customer Service: 1-800-373-1466 Tech Support: x109



“Your Source for Pagers”

Set Time and Date
Turn Alarm ON / OFF

TO SET TIME AND DATE:

Press the “READ” button until “SET TIME?” appears in the display. Press the “SELECT” button once.

1. Use the “MODE” button to pick the current day of the week. The charter letters appear in the top left of the display. (EG. SU= Sunday MO= Monday) Then press the “SELECT” button once.
2. Press the “MODE” button to choose the month. (EG. 5=MAY 6=June) Then press the “SELECT” button once.
3. Press the “MODE” button to choose the day of the month.

ALARM:

This pager comes with an alarm function that will make the pager alert at a specified time every day whether the pager is on or off. There are 3 separate alarms that can be set for different times of the day.

To turn the alarm ON/OFF:

1. When the pager is initially turned on, press the “MODE” button until “SET ALARM” appears in the display.
2. Press the “SELECT” button once to enter the alarm mode. To set alarm #1, press the “SELECT” button again and the word “OFF” will blink. TO turn ON, press the “MODE” button once.
3. Press the “SELECT” button once again, then using the “MODE” button to change the hour to the desired number.
4. Press the “SELECT” button once to go to the minutes and using the “MODE” button, change the minutes to the desired number. Repeat for AM or PM

When complete, press the “READ” button. For alarms 2 and 3, after accessing alarm function, press the “MODE” once more for alarm 2 and again for alarm 3. Set these alarms the same way as alarm 1. To turn any alarm off, while in the alarm mode, change the “ON” to “OFF”

**WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: 1-800-373-1466 Tech Support: x109**



Directory and Battery Information

“Your Source for Pagers”

DIRECTORY:

The directory (with the ability to store up to 10 numbers) can be used as an additional memory or as a phone book to store your important numbers. While reading the message, you can import a copy of the message into the directory. To do so, press the “SELECT” button until a phone symbol appears in the top of the display. Press the “MODE” button to imprint a copy of the message into your directory (Please note, the directory can only store 12 digits per memory, and is unable to store alpha canned messages.) To access your directory, press the “SELECT” button until “DIRECTORY” appears in the display, and press the “MODE” button. Use the “READ” button to read through all you directory messages. Messages stored in the directory can be also locked/unlocked and individually erased.

Battery Information:

1. This pager uses only AAA alkaline batteries. Do not use “Heavy Duty” batteries or rechargeable batteries. These batteries may cause damage to the pager and will void the pager warranty.
2. When battery is low, “LO-BATTERY” and the low battery symbol will be shown on the display. To remove the old battery, slide the battery door to the right to open. Remove the old battery. Align the new battery so that the positive (+) and negative (-) marking are in the proper position, and insert the new battery. Replace the battery cover and press the “ON” button to make sure the pager powers on.

**WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: 1-800-373-1466 Tech Support: x109**



Canned Messages

“Your Source for Pagers”

CANNED MESSAGES:

00	C-U- LATER	14	HURRY UP	28	HAVE LUNCH?
01	TURN ON CELL	15	WAITING 4-U	29	HAVE DINNER?
02	HAPPY B-DAY	16	EMERGENCY	30	WANNA GO EAT
03	COME HOME	17	MEET AT CAFÉ	31	WANNA HANG?
04	CALL HOME	18	MOVIES	32	YES
05	DO NOT 4-GET	19	ARCADE	33	NO
06	GOOD NIGHT	20	MALL	34	MAY BE
07	HELLO	21	PLAY B-BALL	35	CLUBBING
08	HOW ARE YOU?	22	PLAY Q-BALL	36	MEETING
09	I LOVE YOU	23	PLAY CARDS	37	SO COOL
10	I NEED YOU	24	GO BOWLING	38	HII BABY
11	I MISS YOU	25	GO CRUSING	39	I DINNO
12	NEED HELP	26	GO SHOPPING		
13	NEED INFO	27	GO SWIMMING		

When your friend pages you, they can add “#00” – “#39” (any choice). They are able to link up to 4 canned messages.

Example:

1. Dial pager number and wait for connected tone
2. Press “*” once. Then press “#09” and the number you wish the person to call you back at.
3. Press “*” twice to end the call

The pager will display the following:

1. The pager will first display “I love you”
2. The pager will then display the phone number you entered.

**WaveWare Technologies, Inc. www.wirelessmessaging.com
Customer Service: 1-800-373-1466 Tech Support: x109**