




Apollo AP-700 Pager
Hand – Button Programming

AP-700 Pager Programming Quick Start Guide

This Document is for the Button Programming the AP-700 Pager

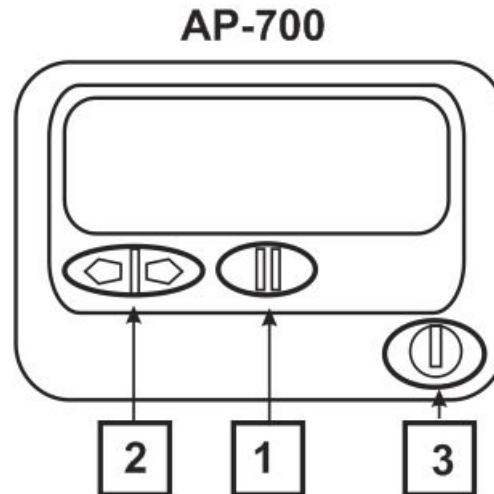

- 1) TO PROGRAM PAGERS, REMOVE BATTERY AND HOLD DOWN BUTTON 1 WHILE YOU RE-INSERT THE BATTERY. HOLD BUTTON UNTIL "PASSWORD" OR "FREQUENCY" SHOWS IN THE DISPLAY.
- 2) IF "PASSWORD" IS SHOWN, PRESS BUTTON 3 TO MOVE TO THE FREQUENCY SCREEN.
- 3) TO CHANGE FREQUENCY: PRESS BUTTON 1 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON 2 TO MOVE THE CURSER TO THE NEXT POSITION TO THE RIGHT. WHEN THE FREQUENCY IS COMPLETE, PRESS THE 3 BUTTON TO CHANGE TO THE CAP CODE SCREEN.
- 4) BUTTON 1 WILL TURN ON/OFF THE CAP CODE SLOT. TO CHANGE THE CAP CODE: FOLLOW THE STEPS ABOVE TO CHANGE THE NUMBERS AND PRESS BUTTON 3 TO CHANGE TO THE NEXT CAP CODE SCREEN. **Note:** IN MOST CASES THE 4 DIGITS AT THE END OF THE CAP CODE SHOULD BE ALL "A"S.
- 5) BAUD RATE (POCSAG ONLY)- TO CHANGE THE BAUD RATE: PRESS THE 1 BUTTON TO CHANGE BETWEEN 512,1200,2400. PRESS BUTTON 3 TO MOVE TO THE "MODIFY PASSWORD" SCREEN. **Note:** THE BAUD RATE SCREEN IS NOT AVAILABLE ON THE "FLEX" MODELS.
- 6) TO MODIFY THE PASSWORD "0000"- (THIS IS THE LAST SCREEN): A PASSWORD CAN BE ENTERED HERE TO PROTECT THE PAGER. USE BUTTON 1 TO CHANGE THE NUMBER AND BUTTON 2 TO MOVE THE CURSER TO THE NEXT NUMBER TO THE RIGHT. PRESS BUTTON 3 WHEN DONE.
- 7) THE PAGER WILL BEEP AND SHOW "PASS", THIS CONFIRMS THAT THE PROGRAMMING HAS BEEN ACCEPTED.

NOTE: After programming the pager thru the buttons, please remove and re-install the battery.

Side Note: The Frequency Screen will also have "NB" and "WB" as Choices Located at the "Far Right Side" of the Screen. This Designates as **Wide Band** and **Narrow Band** and you would choose whichever matches the Paging Transmitter for the Pager. Generally this choice is "NB" as Most Transmitters built since year 2011 are **Narrow Band**.