

WT 802


User Manual

Contents

| | | | |
|----------------------------------|----|---|----|
| Introduction | 1 | Auto Scroll | 16 |
| Getting Started | | Reminder Alert | 17 |
| Battery Information | 3 | Set Zoom | 18 |
| Battery Installation and Removal | 4 | Messages | |
| Button Definition | 5 | Button Definition for Inbox and Saved Folders | 19 |
| Pager On | 6 | Button Definition for Info Folder | 20 |
| Pager Off | 6 | Inbox Folder | 21 |
| Backlight | 6 | Inbox Folder Function Menu | 22 |
| Main Menu Screen | 7 | Receiving Messages | 24 |
| Function Menus | | Error & Priority Messages | 25 |
| Function Menu | 8 | Message Full Indication & Duplicate Messages | 26 |
| Quick Access to Vibrate Mode | 10 | Info Folder (Information Service) | 27 |
| Time and Date | 11 | Info Folder Function Menu | 28 |
| Private Time | 12 | Saved Folder | 30 |
| Alarm (One Time/Daily) | 13 | Saved Folder Function Menu | 31 |
| Pager Control | 14 | | |
| Set Contrast | 15 | | |

 
| | |
|---|----|
| Feature Name Change | 32 |
| Low Battery Alert | 33 |
| Out of Range | 33 |
| Power Up Message | 33 |
| Displays | |
| Auto Backlight on upon reception of message | 34 |
| Over the Air Programming | 34 |
| Maintenance | |
| Care for your pager | 35 |

Battery Information

This pager is designed to operate on one 'AA' size alkaline battery or NiMH rechargeable battery. (Do not use any other battery type.) If the display shows  the battery level is low.

Replace the battery as described on page 7. The correct time and any stored messages will remain intact for up to one minute after removing the battery.


Intrinsic Safety Markings

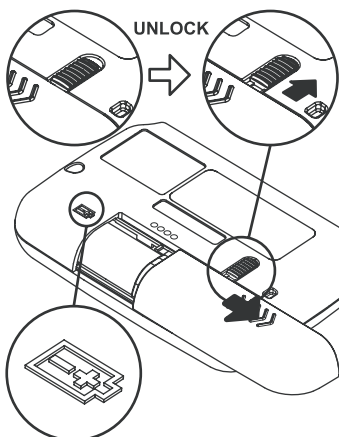

Battery Installation and Removal


- Place the pager face down on the palm of your hand
- Unlock the door and slide it out as shown
- Insert new battery into battery compartment
- Ensure that the battery polarity is correct as indicated on the housing.
- To close, slide the battery door back into position and lock it

 Button Definition

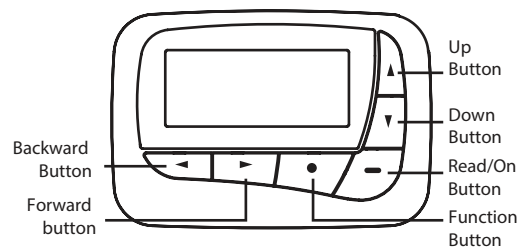
 


- Backward Button : navigate back
- Forward Button : navigate forward
- Function Button : access the function menu
- Read/On button : read messages/hold to turn pager on
- Down button : navigate down/hold to quick access to vibrate mode
- Up button : navigate up



Pager ON

Press and hold  for 2 seconds to turn on the pager.

 
Pager OFF


Press  button once from the Main Menu screen to go to the Function Menu screen, then press  button five times to select TURN OFF function.


Press  button, "TURN OFF" is displayed.

Press  button again to confirm turning your pager off, or  button to cancel.

Backlight

   
Press and hold  for 2 seconds to turn ON the backlight manually

 

 
 

Press and hold  for 2 seconds to turn OFF the backlight manually

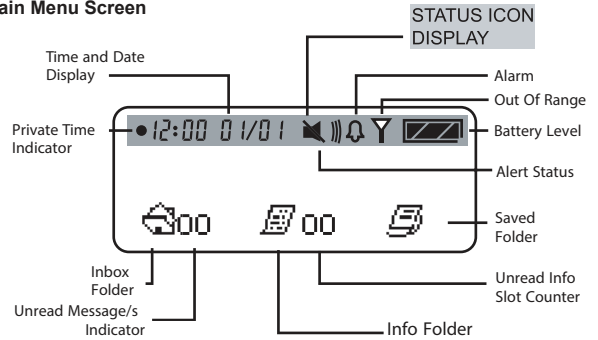Main Menu Screen

The pager returns to the Standby screen after the time out period. Time, date, battery level and private time indicators are displayed in the Standby screen.

Press any button to return to the Main Menu screen

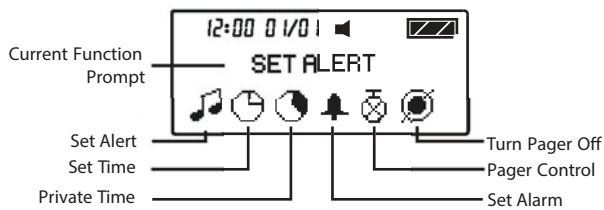

Function Menu



- Press  to enter the function Menu screen from the Main menu screen.
- Press  /  to move to the desired menu icon
- Press  to select
- Press  to cancel and return to the Main Menu



Pager Tips

Without any key press, the pager automatically returns to the Standby screen without saving changes after 16 sec.

Alert Mode

- Press  to enter the Function Menu screen from the Main Menu screen
- Press  to enter alert mode sub function. The dummy alert will blink


- Press  /  to move to different alert modes and hear a sample from vibrate, sleep, vibra-call, chirp, continuous alert and pleasing alerts 1-8


- Press  to confirm your selection, or  to cancel.


The alert status is updated in the status icon display as described below:

- | | |
|---|---|
|  Audio: Pleasing alert, chirp continuous alert |  Sleep: Receives messages but no alert |
|  Vibrate: vibration |  Vibra-call: Vibration followed by audio alert |

Quick Access to Vibrate mode

  
You can use  to quickly access vibrate mode if your pager is currently in audio alert mode. (Your pager must be on the Main Menu page in order to use this function).

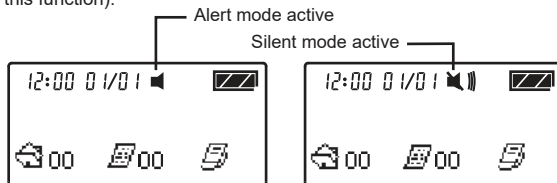








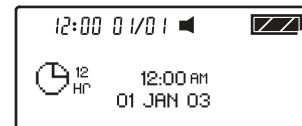



- Press and hold  for 2 seconds to access vibrate mode.
- Repeat the process to return to previously active alert mode.
- When the pager is in Private Time, quick access to vibrate mode is not available.

 Time and Date

 
To access and set the time and date of your pager;












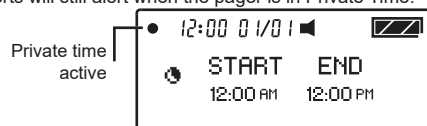



- Press  once from the Main Menu screen to enter the Function Menu screen and SET ALERT will appear.
- Press  button once to select "SET TIME", then press the  button and a 12 hour clock appears.
- To select the 12hr or 24hr clock press  /  then press  to advance and set the hour of your pager.
- After pressing  to highlight the hour field, use the  /  button to choose the value.
- Repeat the above steps for setting minutes, AM/PM, day, month and year.
- Press  to confirm your settings, or  to cancel.

 Private Time

   
Activating Private Time sets a daily period of time in which your pager will not alert. Private Time overrides any current alert mode status. However, the pager will still receive messages, the alarm and Priority Alerts will still alert when the pager is in Private Time.









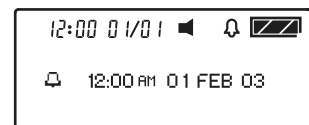







- Press the  button once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press  twice to select "PRIVATE TIME", then press  to enter. A flashing clock appears.
 - Press  /  to activate or deactivate the Private Time function.*
 - Press  to go to the "START" field, press  /  to set the starting time. Then press  to go to the "END" field, press  /  to set the ending time.
 - Press  to confirm your settings, or  to cancel.
- * A dot at the left of the Status Icon Display indicates that the function is active.

Alarm (One Time/Daily)

   To use your pager as an Alarm;




- Press  once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press  three times to select "SET ALARM", then press  to enter and a flashing  appears.
- Press  /  to turn the alarm ON  or OFF . Press  to move to the time field.
- Press  /  to change the hour then press  to move to the next field. Repeat this step for setting minutes, AM/PM, day, month and year.
- Press  to confirm your settings, or  to cancel.
- When the Alarm is active an Alarm icon is displayed in the Status Bar.

Pager Tips

By setting no date for your alarm the alarm will sound every day at the specified time; - example: " 9 : 00 AM - - - - - "

Pager Control

 
The Pager Control Menu allows you to control the default settings of your pager.

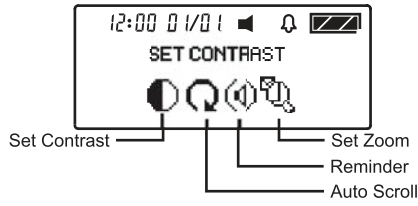

- Press **●** once from the Main Menu screen to go to the Function Menu screen
- "SET ALERT" will appear. Press **▶** four times to navigate to "PAGER CONTROL"
- Press **●** to enter subfunction screen.
- Press **◀/▶** move to the next control icon.
- Press **●** to enter the selected control setting screen.

Set Contrast

 To change the display contrast of your pager's screen;

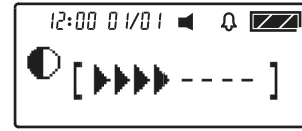

- Press **●** once from the Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press **▶** four times to select "PAGER CONTROL", then press **●** and "SET CONTRAST" appears. Press **●** to select Set Contrast.
- Press **◀/▶** to select and change the display contrast of your pagers screen.
- Press **●** to confirm your settings, or **■** to cancel.

Auto Scroll

Activating Auto Scroll will cause the display to scroll through a message automatically. The display will scroll faster or slower depending on the set speed.



- Press **●** from the Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press the **▶** button four times to select "PAGER CONTROL", then press **●**. Press **▶** once and "AUTO SCROLL" appears. Press **●** to select Auto Scroll.
- Press **▲/▼** to make auto scroll active **⌚** or inactive **⌚**.
- Press **▶** to highlight auto scroll level and use **▲/▼** to select "SLOW", "MEDIUM" or "FAST" as the scroll speed.
- Press **●** to confirm your settings, or **■** to cancel.

Reminder Alert

By turning Reminder on, the pager will alert at 2 minute intervals when there are unread messages.



- Press **●** once from Main Menu screen to go to the Function Menu screen, "SET ALERT" will appear. Press **▶** four times to select "PAGER CONTROL", then press the **●** button once and press the **▶** button twice and "REMINDER" appears. Press **●** to enter the Reminder menu.
- Press **▲/▼** Button to switch ON or OFF.
- Press **●** to confirm your settings, or **■** to cancel.

Set Zoom

You can double the font size of your message display for easy reading.



- Press **●** once from Main Menu screen to enter the Function Menu screen and "SET ALERT" will appear. Press the **▶** button four times to select "PAGER CONTROL", then press the **●** button and scroll the **▶** button three times and "ZOOM" appears. Press **●** to enter the Set Zoom menu.
- Press **▲/▼** to switch ZOOM ON or OFF.
- Press **●** to confirm your settings, or **■** to cancel.

Button Definition for Inbox and Saved Folders

In the Inbox or Saved Folder Screen;

- : display content of current message
- ▶** : move to the next message
- ◀** : move to the previous message
- ▲** : move to the previous line of message icons
- ▼** : move to the next line of message icons
- : enter Inbox/Saved Folder Function screen

When reading an Inbox or Saved message;

- : scroll down through the message. When it reaches the bottom it returns to the Inbox/Saved Folder Screen
- ▶** : move to the next message
- ◀** : move to the previous message
- ▲** : jump to the top of the message. When at the top of the message it returns to the Inbox/Saved Folder Screen
- ▼** : scroll down through the message. When it reaches the bottom it returns to the Inbox/Saved Folder Screen
- : enter Inbox/Saved Message Function screen

Button Definition for Info Folder

In the Info Folder Screen;

 
- : display the content of current message in the slot
- ▶** : move to the next slot
- ◀** : move to the previous slot
- ▲** : preview the previous message in the current slot
- ▼** : preview the next message in the current slot
- : enter Info Folder Function screen

When reading an Info Folder Message;


- : scroll down through the message. When it reaches the bottom it jumps to the next message. When it reaches the last message in the slot the pager returns to the first message of the slot
- ▶** : move to the next message
- ◀** : move to the previous message
- ▲** : jump to the top of the message. When at the top it returns to the Info Folder Screen
- ▼** : scroll down through the message. When it reaches the bottom it jumps to the next message. When it reaches the last message in the slot the pager returns to the first message of the slot
- : enter Info Message Function screen

Inbox Folder

- Press **■** to enter Inbox Folder Screen from the Main Menu screen when the cursor is on the Inbox Folder icon.

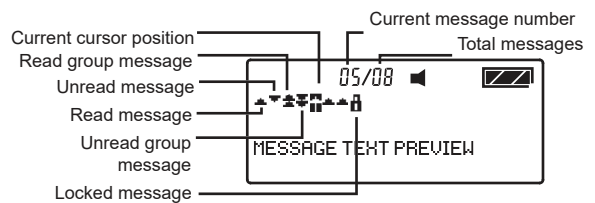

Inbox Folder Function Menu

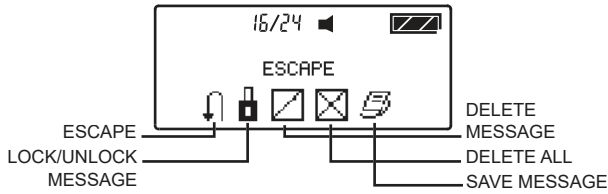 


- Press **▲** to open the Inbox Folder Function Menu screen.
- Press **▶** to move to the next Inbox Folder Function prompt.
- Press **●** to activate the selected function.
- A confirmation prompt "?" comes with "DELETE ALL" and "DELETE MESSAGE".
- Press **●** again to confirm, or **■** to cancel.

- A message is defined as read once the first page of the message has been read. Previewing a message is not considered as reading a message.
- Locking a message prevents it from being accidentally deleted or overwritten by new messages. You can lock up to 20 messages.
- You can enter Inbox Message Function menu by pressing **●** when you are reading the message. The operation is the same as the Inbox Folder Function Menu except there is no "DELETE ALL".
- Please note. Locked messages cannot be deleted. Likewise, unread messages cannot be deleted by using "DELETE ALL".

Receiving Messages

When a message is received, your pager alerts you according to your set alert mode. The time and date stamp at the end of each message indicates when the message was received.

 
(Normal, group and Priority messages have different pleasing alerts)

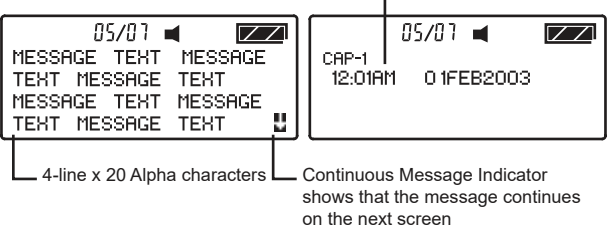

- Press **■** to read the message

Error and Priority Messages

 
- When an error message is received and read, the incorrect characters blink. Error messages are a result of poor reception from the paging station.

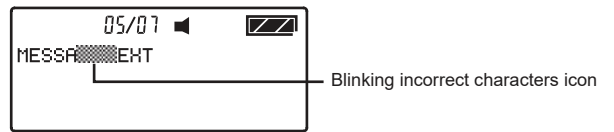

- When a Priority message is received, your pager will alert you with a unique alert no matter what mode the pager is currently in (eg; sleep, vibrate, private time etc.)

Message Full Indication and Duplicate Messages

 -If the Message Full Indicator appears and you have not deleted the old messages, the new received messages will overwrite the oldest read messages first.

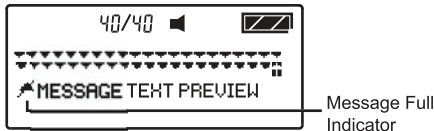


- When your pager receives a duplicate of a message it will not show multiples of the same message but will show only one message and display the Duplicate Message icon in the message preview screen.



Info Folder (Information Service)

Your pager can receive information such as world news or financial report (the extent of the information received depends on your service provider) When an info message is received, your pager alerts you if you turn on the info alert via info folder function menu

 
- Press any button to enter the Main Menu Screen from the Standby screen
- Press **■** to enter the Info Folder Screen from the Main Menu screen when the cursor is on the Info Folder icon.

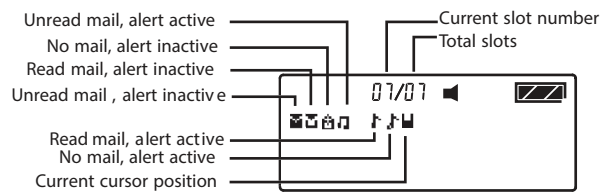

- *Maximum of 5 Info messages from the same source stored in one slot.
- *After a slot is full (5 messages) the next incoming info message will delete the oldest info message.

Info Folder Function Menu

 Press **●** to enter the Info Folder Function Screen from the Info Folder Screen

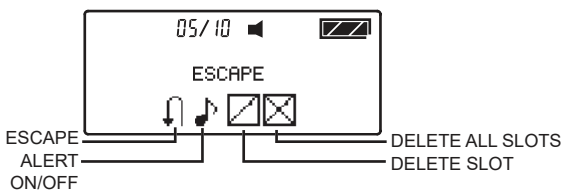


- Press **◀** / **▶** to move to the previous/next Info Folder Function prompt.
- Press **●** to activate the selected function.
- A confirmation message "?" comes with "DELETE SLOT" and "DELETE ALL SLOTS".
- Press **●** again to confirm your settings, or **■** to cancel.

- You can enter Info Message Function menu by pressing **●** when you are reading mail.

The operation is the same as the Info Folder Function menu except there is no "DELETE ALL SLOTS" and there is an additional function of "SAVE MESSAGE", which allows you to move individual Info messages to the Saved Folder.

Saved Folder

 You can store up to 20 important Inbox or Info messages in your Saved Folder. When the Saved Folder is full, "MEMORY FULL" appears if you attempt to store Inbox or Info messages to the Folder.

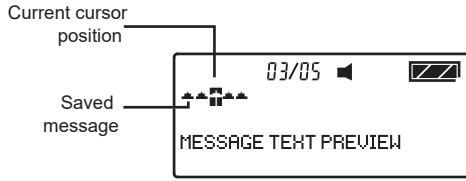

- Press the Button to enter the Saved Folder screen from the Status screen when the cursor is on the Saved Folder icon.


The Br802 / WT802 POCSAG is designed to allow the service provider to customize naming fields for personalization or interface

The following naming components can be changed

| Naming components | Maximum character limit |
|-------------------|-------------------------|
| Group name | 11 |
| Info name | 14 |
| Inbox folder name | 10 |
| Info folder name | 10 |
| Saved Folder name | 10 |

Saved Folder Function Menu

 - Press to enter the Saved Folder Function Screen

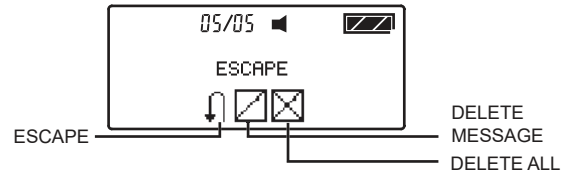

-You can enter Saved Message Function menu by pressing when you are reading the message. The operation is the same as the Saved Folder Function menu except that there is no "DELETE ALL".

Low Battery Alert

When the battery is low on power, the pager will emit an alert every hour during the day (8 am to 8pm)

Out of Range

The Out of range indicates non reception of signal by the pager. When this happens a icon appears in the status icon display



Power Up Message

The customised message will show only when this feature is enabled by the service provider during power up or at the stand by screen.

If this feature is not enabled, you will only see a blank screen with a row of icons at the top of the standby screen.



Autobacklight on Upon Reception of Message

This feature alerts user by sight. Upon reception of message, the pager backlight will automatically be switched on and remains on for the default duration.

Over The Air Programming

(OTA) Over-the-air programming is another service provider function. This allows changing of pager settings without requiring it to be physically connected to a PC.

Maintenance

Care of your pager

To maintain the fine quality of your pager's display screen please do not attempt the following:

- 1) Subject the pager to extreme temperatures or moisture
- 2) Immerse the pager in water
- 3) Use any cleaning solution

Always clean the pager with a non-abrasive cloth

Warning

- DO NOT REPLACE BATTERY WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT.
- DO NOT CHARGE THE BATTERY IN HAZARDOUS LOCATION.

Listed Standards

EN 60079-0 and EN 60079-11