



"Your Source for Pagers"



Apollo 812 (AL-812)

Alpha-Numeric Display Pager

User Guide

WaveWare Technologies, Inc.

Sales / Customer Service at: **1-800-373-1466**

Tech Support at: **1-800-373-1466 x109**

9726 Skillman St. Dallas TX. 75243

www.wirelessmessaging.com



Table of

CONTENTS

“Your Source for Pagers”

Control Buttons	1
Features and Functions.....	2- 3
LCD Display	4
Function Operation.....	5- 17
Receiving and Reading a Message.....	5
Out of Service Range.....	6
How to Move the Curser.....	7
Setting the Alert Mode.....	8
Turning your Message Receiver Off / ON.....	9
Setting the Alarm Mode.....	10
Setting the Time and Date	11
Setting the Auto Scroll.....	12
Locking and Unlocking Messages.....	13
Deleting Messages from Memory.....	14
Deleting ALL Messages from Memory.....	15
Moving to Memo / Memo.....	16
Full Message / Mail Drop.....	17

WaveWare Technologies, Inc. www.wirelessmessaging.com

Customer Service: **1-800-373-1466** Tech Support: **x109**

 


Control Buttons

“Your Source for Pagers”

Model: **Apollo 812** (AL- 812)

Control Buttons

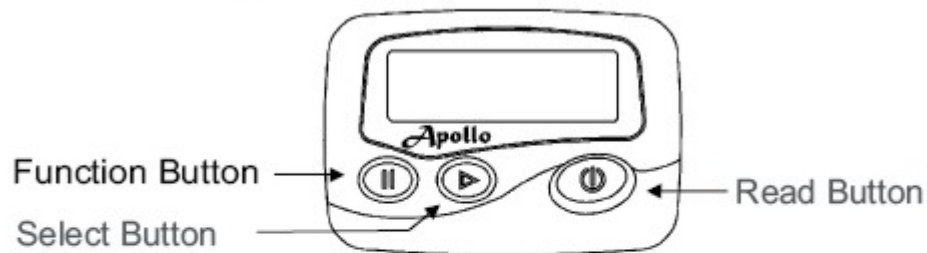

⏻ Read button

- to read message
- to turn the back-light on
- to turn the power on
- to activate the function

▶ Select button

- to move the cursor
- to read message by cycles

⏸ Function button

- to display the function menu
- to adjust the time and date change
- to enable the function mode

WaveWare Technologies, Inc. www.wirelessmessaging.com

Customer Service: **1-800-373-1466** Tech Support: **x109**



Features and Functions

“Your Source for Pagers”

- 2-Line, 42 English Alpha Character Memory
- Back-Lit Display
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory: 10 sets
- Mail Drop: 10 Sets
- Time / Month / Date / Year Display
- User Selectable 12 / 24 Hour Clock
- Message-In Time Indication
- Incomplete Message-In Indication
- Manual On / Off Operation
- Unread Message Indicator
- Duplicate Message Indicator
- Message Lock
- All or Individual Message Delete
- Low Battery Alert / Display
- Reminder Flashing

Customer Service: **1-800-373-1466** Tech Support: **x109**

3



Features and Functions

Continued

“Your Source for Pagers”

- Reminder Alerts
- Message Full Indication
- Message Full Auto Storage
- Message Auto Storage to Mail Drop (User Selectable)
- Display Out of Service Area
- Display 5 Daily Alarms Sets
- 4 Beep Alerts / Silent Vibration / 8 Musical / Sleep Mode
- Mail Drop Alerts
- Remain in Memory While Replacing the Battery

WaveWare Technologies, Inc. www.wirelessmessaging.com

 
Customer Service: **1-800-373-1466** Tech Support: **x109**



LCD Display

“Your Source for Pagers”

LCD Display



LCD DISPLAY

- POWER ON
- BEEP ALERT
- MUSIC ALERT
- ALARM
- AUTO SCROLL
- MESSAGE RECEIVING
- OUT OF SERVICE AREA
- BATTERY GAUGE
- MESSAGE CONTINUED

Message Status Symbols

- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- MAILDROP
- ERROR MESSAGE
- DUPLICATE MESSAGE

Function Menu Symbols

- CURSOR MOVE DIRECT
- SET ALERT
- PAGER OFF
- SET ALARM
- SET TIME
- SET SCROLL
- LOCK MESSAGE
- UNLOCK MESSAGE
- DELETE
- DELETE ALL
- MOVE TO MEMO



Reading Your Message




“Your Source for Pagers”

Receiving and Reading Your Message


When a message is received and has not been read, your message receiver alerts and displays a flashing () symbol.

1. Press **▶**, to review all your messages.
2. Move the cursor to the desired message, press **⏵**, to display the message.

*A (▶) symbol at the right corner of the screen indicates the message you are reading continues beyond the four lines of the display. Press **⏵**, to advance to the next screen of the message.

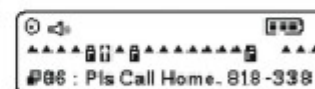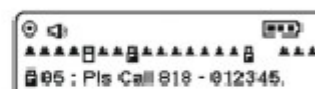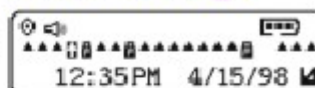

Or if you have set up the auto scroll function, you can read your message screen by screen by rapidly scrolling.

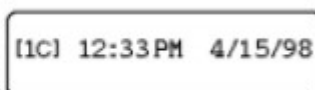




Out of Service Range

“Your Source for Pagers”

Out of Service Range

With this option enabled, () is displayed whenever you are out of range of the paging transmitter. The symbol (), is no longer displayed when you return to your transmitting area .

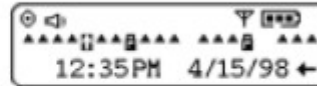






How to move the Curser

“Your Source for Pagers”

How To Move the Cursor

1. Press **||**, to display the function menu. The function menu gives you access to the many features of your message receiver through a series of symbols and prompts. When the function menu screen is first displayed, the (→) symbol flashes, indicating the present position of the cursor.
2. Press **||** once, to change the (←) symbol direction.
3. Press (I), to activate the function. Or press **||**, to exit the function.

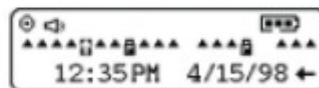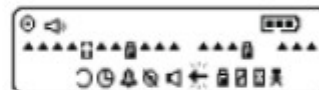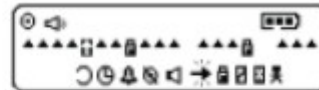




Setting the Alert Mode


“Your Source for Pagers”

Setting the Alert Mode

 1. Press **II** , to display the function menu.
2. Press **▶** , to move the cursor to (◀).
3. Press **II** , to display the alert screen, your message receiver is in the audible alert mode to select the alert pattern.(See the Example of Alert Pattern Screen II, your message receiver is in the Beep Mode/ Tone 2)



***Your message receiver has a **Beep Mode** (◀) 4 tones , **Music Mode** (♫) 8 music , allowing you to select and change the alert .

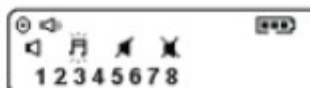

You can also select **Silent Mode** (⊘) a vibrator alert , or **Sleep Mode** (⊘) no alert.




To change your alert :

- a. Press **II** , to display 4 kinds of alert mode .The message receiver gives a sample of each alert when scrolling through the selections.
- b. Press **▶** , to move the cursor to the desired alert.
- c. Press **(I)** , to activate the alert.



***With is option enable , the message receiver has 2 symbols show of the display . (◀) Beep mode , (♫) Music mode , Silent mode and Sleep mode no symbols .

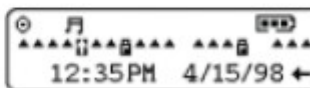




“Your Source for Pagers”

Turning the Message Receiver ON / OFF

Turning Your Message Receiver Off

1. Press **||** , to display the function menu.
2. Press **▶** , to move the cursor to pager off (Ⓜ) .
3. Press **||** , to display the " PAGER OFF ? " screen .
4. Press **▶** , to turn the message receiver off.

 

Turning Your Message Receiver On

Press **Ⓜ** , your message receiver alerts and shows (Ⓜ) in the left column of the display. The time and date are shown at the bottom of the display.







Setting the Alarm Mode

“Your Source for Pagers”

Setting the Alarm Mode

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to set alarm (🔔).
3. Press **||**, to display the " SET ALARM " screen .
4. Press **||**, to move the cursor . Press **▶**, to figure the digit value or defines the alarm status ---either alarm enabled (🔔) or alarm disabled (🔕) .
5. Press **(1)**, to turn to stand-by mode , (🔔) the symbol shows at the middle corner of the screen.

    






"Your Source for Pagers"

Setting the Time and Date

Setting the Time and Date

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to set time (⊙).
3. Press **||**, to display the " SET TIME " screen.
4. Press **▶**, to move the cursor, Press **||**, to adjust the digit value .
5. Press (⓪), to activate the time and date change and the screen turns to stand-by mode .

   




Setting the Auto Scroll

"Your Source for Pagers"

Setting the Auto Scroll

 1. Press **II** , to display the function menu.
2. Press **▶** , to move the cursor to auto scroll (**○**) .
3. Press **II** , to display the " SET SCROLL " screen .
4. Press **II** , to select disable auto scroll (**X**) , or the speed of the auto scroll , slow (**■**) , medium (**■ ■**) , and fast (**■ ■ ■**) .
5. Press **▶** , to activate the auto scroll function , and the symbol (**○**) shows at the middle corner of the screen .









“Your Source for Pagers”

Locking and Unlocking Messages

Locking and Unlocking Messages

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to lock (**🔒**).
3. Press **||**, to lock the message in memory, and the symbol (**🔒**) replaces to (**🔒**).
4. Press **▶**, to move the cursor to unlock (**🔓**).
5. Press **||**, to unlock the message in memory, the symbol (**🔓**) replaces to (**🔒**).

    





"Your Source for Pagers"

Deleting Messages from Memory

Deleting Messages from Memory

1. Press **||**, to display the function menu.
2. Press **▶**, to move the cursor to delete (⌫).
3. Press **||**, to display the "DELETE ?" screen.
4. Press **▶**, to receive confirmation of the delete request .Or press (⏏) to exit the delete request.

  





"Your Source for Pagers"

Deleting ALL Messages From Memory

Deleting All Messages from Memory

  1. Press **II** , to display the function menu.
2. Press **II** , to move the cursor to delete all (**II**).
3. Press **II** , to display the "DELETE ALL ?" screen.
4. Press **▶** , to receive confirmation of the delete all request (except the message is locked). Or press **(U)** , to exit the delete all request .







Moving to Memo / Memo

“Your Source for Pagers”



Moving to Memo

1. Press **||**, to display the function menu .
2. Press **▶**, to move the cursor to memo (美) .
3. Press **||**, to move the message into your personal memo.

  

Memo

  Up to 10 Personal Memo are available to store . (美) is displays the symbol of Memo .





Full Message / Mail Drop

“Your Source for Pagers”

Full Message

To move the cursor to the symbol of Full message index , up to 10 messages can be stored . Press (I) , to enter Full message to read messages.(M) is displays the symbol of Full message .

```

⊙ ◀▶ [***]
***** **M***** ***** **M**
12:35 PM 4/15/98 ←
  
```

```

M01 : Pls Call 818 - 812345.
[1C] 12:38 PM 4/15/98
  
```

Mail Drop

To move the cursor to the symbol of Mail Drop , up to 10 messages are available .Press (I) , to read the message of Mail Drop .(M) is displays the symbol of Mail Drop

```

⊙ ◀▶ [***]
***** **M***** ***** **M**
12:35 PM 4/15/98 ←
  
```

```

M01 : Pls Call 818 - 812345.
[1C] 12:39 PM 4/15/98
  
```