



*"Your Source for Pagers"*



## ***Apollo Gold (AL-929)***

**Alpha-Numeric Display Pager**

# **User Guide**

**WaveWare Technologies, Inc.**

Sales / Customer Service at: **1-800-373-1466**

Tech Support at: **1-800-373-1466 x109**

9726 Skillman St. Dallas TX. 75243

[www.wirelessmessaging.com](http://www.wirelessmessaging.com)



Table of

# CONTENTS

***“Your Source for Pagers”***

<b>Control Buttons .....</b>	<b>1</b>
<b>Features and Functions.....</b>	<b>2- 3</b>
<b>LCD Display .....</b>	<b>4</b>
<b>Function Operation.....</b>	<b>5- 26</b>
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting Message .....	8
Deleting All Message .....	9
Move to Message Memo .....	10
Setting Alert .....	11
Pager On / Off .....	13
Setting Auto Sleep .....	14
Setting Alarm .....	15
Setting Time And Date .....	16
Setting Scroll .....	17
Setting Zoom In Or Zoom Out .....	19
Reading Mail Drop .....	20
Moving The Cursor .....	21
Reading Personal Message.....	22
Reading Full Message .....	23
Backlight / Duplicate .....	24
Error Message / Battery Gauge .....	25
Set Mail Drop Alert .....	26
One Button Delete (Optional Feature).....	27

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

 
Customer Service: **1-800-373-1466** Tech Support: **x109**



## Control Buttons

*“Your Source for Pagers”*

Model: **Apollo Gold** (AL- 929)

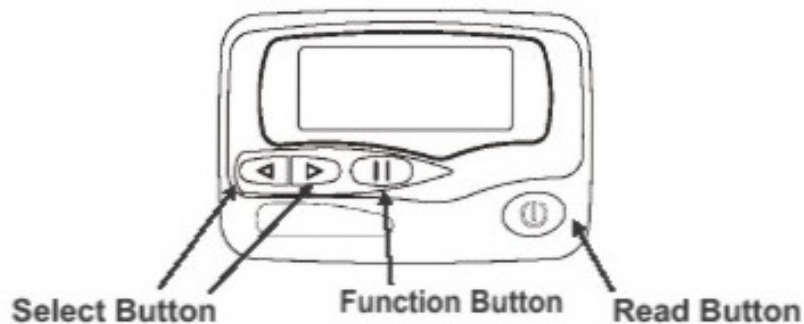

### ⓘ Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

### ◀ ▶ Select Button

- to move the cursor
- to preview message by cycles

### || Function Button

- to display the function menu
- to adjust the time and date change
- to enable the function mode
- to move cursor to general or mail drop area

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: **1-800-373-1466** Tech Support: **x109**



## Features and Functions

***“Your Source for Pagers”***

- 4-Line, 84 English Alpha Character Memory
- Easy-To-Read Back-Lit Display
- Up to 28,627 Characters of Memory Capacity
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory: 10 sets Mail Drop Available
- Show Time of Day And Date
- User Selectable 12 / 24 Hour Clock
- Message Date And Time Stamping
- Incomplete Message-In Indication
- Duplicate Message Indicator
- Locks Important Message (Up To 10 Sets)
- All or Individual Message Delete
- Unread Message Indicator, Reminder Alert

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)  
Customer Service: **1-800-373-1466** Tech Support: **x109**



## Features and Functions

*“Your Source for Pagers”*

- Low Battery Alert , Low Battery Indicator
- Zoom The Display - To Enlarge Message For Easy Read Ability
- Message Full Indication , Message Full Auto Storage
- Message Preview For A Quick Look At Each Message
- Message Move to Memo ( User selectable )
- Service Area Indication
- 5 Built-In Alarm Clock
- 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- Mail Drop Alerts
- Save Message When Off And When Changing Battery

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: **1-800-373-1466** Tech Support: **x109**



# LCD Display

*“Your Source for Pagers”*

## LCD Display



### Pager Status Symbols

- ⊕ POWER ON INDICATOR
- 🎵 MUSIC ALERT
- 🔊 BEEP ALERT
- 🕒 AUTO SLEEP INDICATOR
- 🔔 ALARM INDICATOR
- 📄 AUTO SCROLL INDICATOR
- 🔋 BATTERY CAPACITY
- 📶 OUT OF RANGE INDICATOR
- 🚫 ERROR MESSAGE
- 📄 DUPLICATE MESSAGE
- 📧 MAIL DROP MESSAGE
- 👤 MEMO MESSAGE INDICATOR

### Message Status Symbols

- ▲ MESSAGE IN MEMORY
- 📄 MESSAGE SELECTING
- 🔒 MESSAGE LOCK IN MEMORY
- 📄 MESSAGE LOCK SELECTING
- 👤 PERSONAL MESSAGE
- 📄 FULL MESSAGE
- 👤 PERSONAL MESSAGE SELECTING
- 📄 FULL MESSAGE SELECTING
- 📄 MAILDROP IN MEMORY
- 📄 MAILDROP SELECTING
- ▲ DUPLICATE MESSAGE

### Function Menu Symbols

- ⬆ UP OR ESCAPE
- 🔊 SET ALERT
- 🔕 PAGER OFF
- 🕒 SET AUTO SLEEP
- 🔔 SET ALARM
- 🕒 SET TIME
- 📄 SET SCROLL
- 🔍 ZOOM IN / ZOOM OUT
- 🔒 MESSAGE LOCK
- 🗑 MESSAGE DELETE
- 🗑 DELETE ALL
- 👤 MOVE TO MEMO
- 🔊 MAIL DROP ALERT

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: **1-800-373-1466** Tech Support: **x109**



## Reading Your Message

*"Your Source for Pagers"*

### Receiving And Reading Your Message

A flashing ▲ symbol indicates you have a message has not been read.(The symbol ▼ of mail drop shows on screen by flashing).

Press ◀ or ▶, to preview the message.

Press Ⓚ , to display your message.,Press Ⓚ again, to view the next screen.

If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the time and date: 12:35PM 4/15/98.

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the message content: 06:Pls Call818-123456 7,Divid.

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the message content: 06:Pls Call818-707856 7, Roger.

A simulated pager screen showing the message content: 06:Pls Call818-707856 7, Roger. and the time and date: [1]12:50PM 4/12.



*“Your Source for Pagers”*

## Locking Messages

### Locking Messages

Press ◀ or ▶ , to move the cursor to the desired flashing symbol █ .

Press || , press ◀ or ▶ to select the desired message to lock.

Press || , to lock the message. .

The symbol █ is displayed , indicating the status of the message in memory.







## Unlocking Messages

 
 
*"Your Source for Pagers"*

### Unlocking Messages

Press ◀ or ▶ , to move the cursor to select the message to unlock.

Press || , then , press ◀ or ▶, to " MESSAGE UNLOCK " Mode.

Press || , to unlock the message.

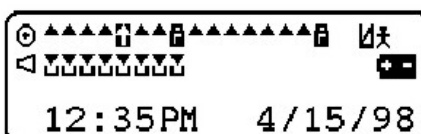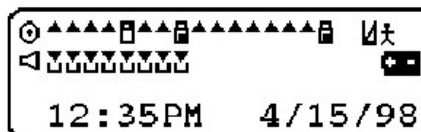



## Deleting Messages

*"Your Source for Pagers"*

### Deleting Messages

Press ◀ or ▶ , to move the cursor to select the message you desire.  
Press ① to read the message.

Press ⏪ , press ◀ or ▶ , to display " MESSAGE DELETE " Mode.

When " MESSAGE DELETE ? " is displayed on the screen , press ▶ to delete the message.

```

  ① 05:Pls Call818-123456
  ◀ 7,Divid.
  [1]12:30 PM 4/12
  
```

```

  ① 05:Pls Call818-123456
  ◀ 7,Divid.
  MESSAGE DELETE
  ↑ ① ② ③
  
```

```

  ① 05:Pls Call818-123456
  ◀ 7,Divid.
  MESSAGE DELETE ?
  
```

```

  ① ▲▲▲▲ ①▲②▲▲▲▲▲▲▲▲ ③ ④天
  ◀ ▼▼▼▼▼▼▼▼▼▼
  12:35PM 4/15/98
  
```



## Deleting All Messages

 
*"Your Source for Pagers"*

### Deleting All Messages

( All unlocked and read messages )

Press **||** , press **◀** or **▶** , to "DELETE ALL" Mode .

When "DELETE ALL ?" is displayed , Press **▶** , all unlocked and read messages are deleted.

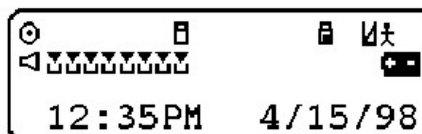





## Setting Alert

*“Your Source for Pagers”*

### Setting Alert

Press **II** , then , press **◀** or **▶** once to display " SET ALERT " Mode .

 
 
 
Press **II** , to enable "SET ALERT".

Press **II** , to move the cursor to the desired alarm mode .( Alert

◻ / Musical ♪ / Vibration 📳 / Sleep 🛌 are optional )

Press **◀** or **▶** , to move to the cursor to the desired tone or music .

Press **Ⓜ** setting the alert is completed.

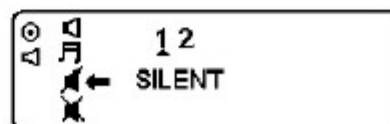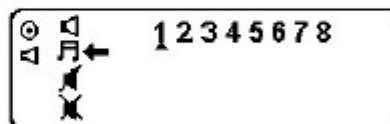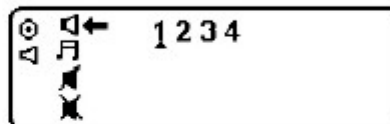






# Setting Alert

*“Your Source for Pagers”*

## Setting Alert

The ◀ or ▶ symbol is displayed if the message receiver is in the audible or musical mode .

   The ◀ or ▶ symbol won't display on screen if the receiver is in the silent mode or sleep mode.

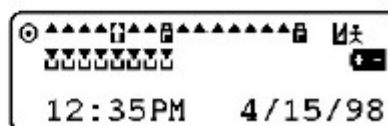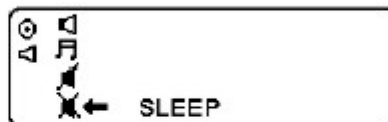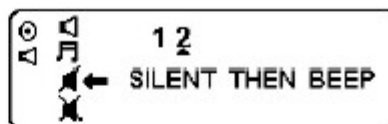



# Turning your Pager OFF

*“Your Source for Pagers”*

## Turning Your Pager Off

 
Press **||** , then , press **◀** or **▶** , to "PAGER OFF" mode.

Press **||** , till "PAGER OFF ?" appears on the screen.

Press **▶** , to turn the pager off .

After turning your pager off , the screen is empty.

Press **Ⓛ** , to turn the pager power on.

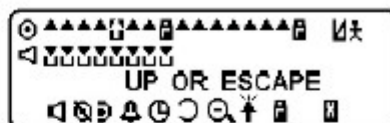



## Setting Auto Sleep

*“Your Source for Pagers”*

### Setting Auto Sleep

Press **II**, then, press **◀** or **▶** to display "Auto Sleep" mode.

 
 
 
 
Press **II**, to enable "Auto Sleep Set" Mode.

Press **II**, to select "open" or "close" (symbol **⌂** or **-**) and adjust the digits, press **◀** or **▶** for moving the cursor.

Press **⏏** setting auto sleep mode is completed. The screen returns to stand-by status.

**⌂** is displayed when the Auto Sleep mode is set.

The enable **zZ** symbol indicates your pager is during setting status.

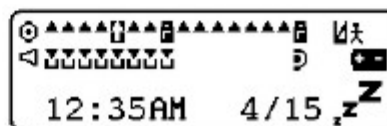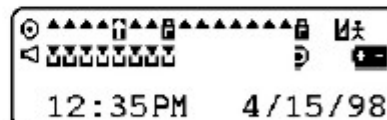





## Setting Alarm

*“Your Source for Pagers”*

### Setting Alarm ( 5 alarms )

 
 
 
Press **||** , then , press **◀** or **▶** to "SET ALARM "Mode.

Press **||** , to enable.

Press **◀** or **▶** , to move the cursor.

Press **||** , to set the alarm status either alarm enabled , alarm disabled or set time.

Press **⓪** setting the alarm is completed.

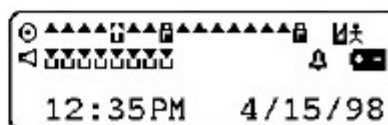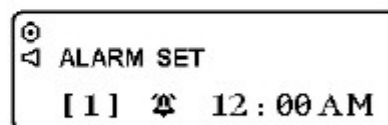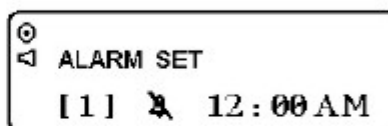



## Setting Time and Date

*“Your Source for Pagers”*

 
 
 
### Setting Time And Date

Press **II**, then , press **◀** or **▶** once until "SET TIME " Mode is displayed.

Press **II**, to enable set time. .

Press **◀** or **▶**, to move the cursor to the hour / minute digit .Then press **II** to adjust each set of digits : AM/PM/24 hr / month / day.

Press **(I)** to activate the time and date change.

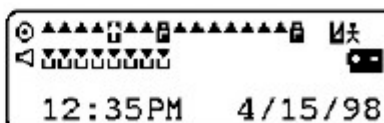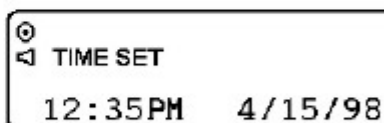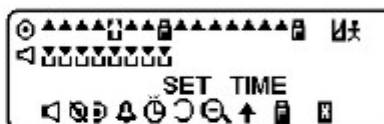



# Setting Scroll

*“Your Source for Pagers”*

 
 
## Setting Scroll

Press **||** , then , press **◀** or **▶** , to " SET SCROLL " Mode .

Press **||** , to enable scroll automatically.

Press **||** , to select the scroll speed.

- (1) **■** -- slow.
- (2) **■ ■** -- normal.
- (3) **■ ■ ■ ■** -- rapid.
- (4) **X** -- off

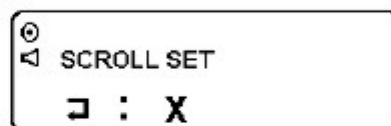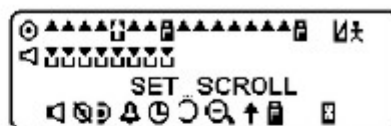




## Setting Scroll

*“Your Source for Pagers”*

### Setting Scroll

Press **▶** to activate the function.

 When the Auto scroll is set, the **▶** symbol is displayed on screen.

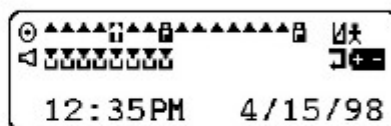





## Setting Zoom IN / Zoom OUT

*“Your Source for Pagers”*

 
 
### Setting Zoom In / Zoom Out

Press **||**, then press **◀** or **▶**, to "ZOOM IN". (symble ) , Then, press **||** to confirm..

The letters on screen enlarge and become two lines to read.

Or press **◀** or **▶** to move the cursor again to " ZOOM OUT " (symble ) , and press **||** to complete.

The letters on screen change to four lines to read.

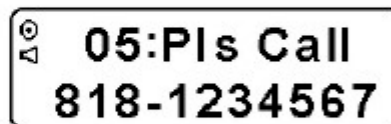



# Reading Mail Drop

 
*“Your Source for Pagers”*

## Reading Mail Drop

Press **||** twice , to move the flashing icon in the second row.

Press **(I)** , to read message or press **◀** or **▶** , to move the icon to the desired Mail drop.

The features allows 14 sets Mail Drop

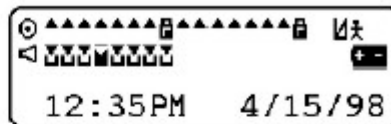




# Moving the Cursor

*“Your Source for Pagers”*

 
 
## Moving the Cursor

Press ◀ or ▶ to move cursor to the  icon flashes, indicating the present position of the message you are going to read.

Press ||, the screen shows " UP OR ESCAPE ".

Press || once, the flashing icon can be move to the top row or the second row.,such like "MAIL DROP AREA"or"MESSAGE AREA".

Press ||, the pager returns to standby mode.

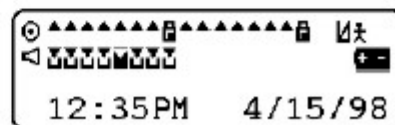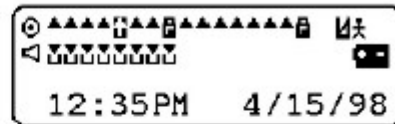



## Reading Personal Message

 
 
 
*“Your Source for Pagers”*

### Reading Personal Message

Press ◀ or ▶, to move the flashing icon to the 𐀀 symbol.

Press Ⓜ, to read message.

When the 𐀀 symbol is shown in the top left-hand corner of the display, indicates the message status as a personal message.

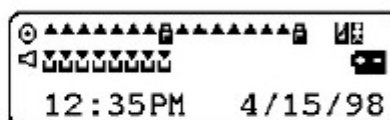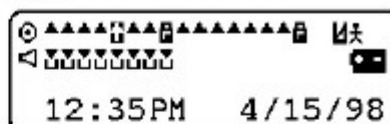





## Reading Full Message

 
 
*“Your Source for Pagers”*

### Reading Full Message

Press ◀ or ▶, to move the flashing icon to the 𐀀 symbol.

Press ①, to read message.

When the 𐀀 symbol is shown in the top left-hand corner of the display, indicates the message status as a full message.

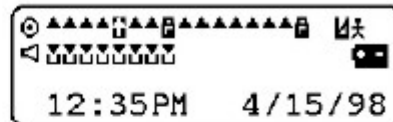





*“Your Source for Pagers”*



## BackLighting and Duplicate Message

### Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

### Duplicate Message

The pager automatically covers by the latest messages if it is received the same message. The  symbol is shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".

Ⓞ  05 : PIs Call 818-123456  
 7, David.  
 [1]12:30 PM 4/12

 


*“Your Source for Pagers”*

## Error Message and Battery Gauge



### Error Message

If it is received the error message. The ☒ symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.

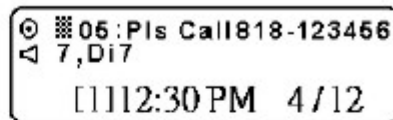

### Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from (full), (1/2), (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

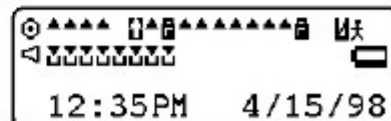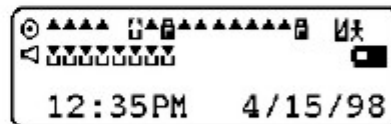



# Set Mail Drop Alert

*“Your Source for Pagers”*

 
 
## Set Mail Drop Alert

To move the cursor to the Mail Drop.

Press **||** , to display the function menu.

Press **◀** or **▶** , to move the cursor to set mail drop alert ( **♪** ).

Press **||** , to activate the function .Or press **⏏** , to exit the function .

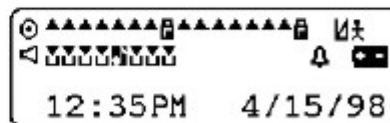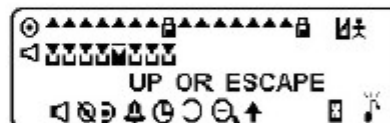



***“Your Source for Pagers”***

**27**

## **One Button Delete** (Optional Feature)

### **To use the One Button Delete Feature:**

- **When the Message is Displayed on the screen, Press and **HOLD** the “Read Button”. (Takes about 4 seconds)**
- **It will ask if you want to Delete the Message.**
- **You release the Read Button and press it again to Delete the Message.**