



*"Your Source for Pagers"*



## ***Apollo Pilot (AL-A26)***

**Alpha-Numeric Display Pager**

# **User Guide**

**WaveWare Technologies, Inc.**

Sales / Customer Service at: **1-800-373-1466**

Tech Support at: **1-800-373-1466 x109**

9726 Skillman St. Dallas TX. 75243

[www.wirelessmessaging.com](http://www.wirelessmessaging.com)



Table of

# CONTENTS

*“Your Source for Pagers”*

Control Buttons .....	1
Features and Functions.....	2- 3
LCD Display .....	4
Function Operation.....	5- 20
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting Message .....	8
Deleting All Message .....	9
Move to Message Memo .....	10
Setting Alert .....	11
Pager On / Off .....	13
Setting Auto Sleep .....	14
Setting Alarm .....	15
Setting Time And Date .....	16
Setting Scroll .....	17
Setting Zoom In Or Zoom Out .....	18
Reading Mail Drop .....	19
Moving The Cursor .....	20
Reading Personal Message.....	21
Reading Full Message .....	22
Backlight / Duplicate .....	23
Error Message / Battery Gauge .....	24
Set Mail Drop Alert .....	25
Set Mail Drop History.....	26

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: **1-800-373-1466** Tech Support: **x109**

 


*"Your Source for Pagers"*

## Control Buttons

Model: **Apollo Pilot** (AL- A26)

### Control Buttons

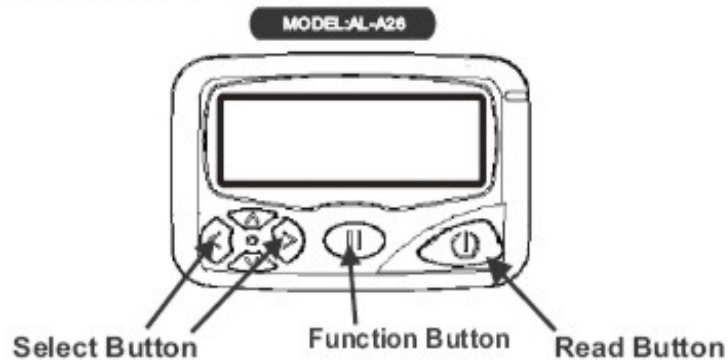

#### ⏻ Read Button

- to read message
- to turn on back-light
- to turn on power

#### ⬆️⬇️⬇️⬆️ Select Button

- to move the cursor
- to preview message by cycles

#### ⏸️ Function Button

- to display the function menu
- to enable the function mode

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: **1-800-373-1466** Tech Support: **x109**



## ***“Your Source for Pagers”*** Features and Functions

- 4-Line, 84 English Alpha Character Memory
- Easy-To-Read Back-Lit Display
- Up to 259,056 Characters of Memory Capacity
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory: 20 sets Mail Drop Available
- Show Time of Day And Date
- User Selectable 12 / 24 Hour Clock
- Message Date And Time Stamping
- Incomplete Message-In Indication
- Duplicate Message Indicator
- Locks Important Message (Up To 10 Sets)
- All or Individual Message Delete
- Unread Message Indicator, Reminder Alert

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)  
Customer Service: **1-800-373-1466** Tech Support: **x109**



## ***“Your Source for Pagers”*** Features and Functions

- Low Battery Alert , Low Battery Indicator
- Zoom The Display - To Enlarge Message For Easy Read Ability
- Message Full Indication , Message Full Auto Storage
- Message Preview For A Quick Look At Each Message
- Message Move to Memo ( User selectable )
- Service Area Indication
- 5 Built-In Alarm Clock
- 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- Mail Drop Alerts
- Save Message When Off And When Changing Battery
- Selectable Auto Scroll Speed; Fast, Middle, Slow or Off



*“Your Source for Pagers”*

# LCD Display

## LCD Display



<u>Pager Status Symbols</u>	<u>Message Status Symbols</u>	<u>Function Menu Symbols</u>
⊙ POWER ON INDICATOR	▲ MESSAGE IN MEMORY	↑ UP OR ESCAPE
♪ MUSIC ALERT	⏏ MESSAGE SELECTING	⏏ SET ALERT
🔔 BEEP ALERT	🔒 MESSAGE LOCK IN MEMORY	🔕 PAGER OFF
🕒 AUTO SLEEP INDICATOR	🔒 MESSAGE LOCK SELECTING	🕒 SET AUTO SLEEP
🔔 ALARM INDICATOR	👤 PERSONAL MESSAGE	🔔 SET ALARM
📄 AUTO SCROLL INDICATOR	📄 FULL MESSAGE	🕒 SET TIME
🔋 BATTERY CAPACITY	👤 PERSONAL MESSAGE SELECTING	🕒 SET SCROLL
📶 OUT OF RANGE INDICATOR	📄 FULL MESSAGE SELECTING	🔍 ZOOM IN / ZOOM OUT
🚫 ERROR MESSAGE	📄 MAILDROP IN MEMORY	🔒 MESSAGE LOCK
📄 DUPLICATE MESSAGE	📄 MAILDROP SELECTING	🗑️ MESSAGE DELETE
📄 MAIL DROP MESSAGE	📄 DUPLICATE MESSAGE	🗑️ DELETE ALL
👤 MEMO MESSAGE INDICATOR		👤 MOVE TO MEMO
		📄 MAIL DROP ALERT
		📄 SET HISTORY



## *"Your Source for Pagers"* Reading Your Message

### Receiving And Reading Your Message

A flashing ▲ symbol indicates you have a message has not been read.(The symbol ▼ of mail drop shows on screen by flashing).

Press ◀ or ▶, to preview the message.

Press Ⓚ , to display your message.,Press Ⓚ again, to view the next screen.

If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the time and date: 12:35PM 4/15/98.

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the message text: 06:Pls Call818-123456 7,Divid.

A simulated pager screen showing a flashing ▲ symbol at the top right, a mail drop symbol ▼, and the message text: 06:Pls Call818-707856 7, Roger.

A simulated pager screen showing the message text: 06:Pls Call818-707856 7, Roger. and the time and date: [1]12:50PM 4/12.



*“Your Source for Pagers”*

## Locking Messages

### Locking Messages

Press ◀ or ▶ , to move the cursor to the desired flashing symbol □ .

Press || , press ◀ or ▶ to select the desired message to lock.

Press || , to lock the message. .

The symbol □ is displayed , indicating the status of the message in memory.







*"Your Source for Pagers"*

 
 
## Unlocking Messages

### Unlocking Messages

Press ◀ or ▶ , to move the cursor to select the message to unlock.

Press || , then , press ◀ or ▶, to " MESSAGE UNLOCK " Mode.

Press || , to unlock the message.

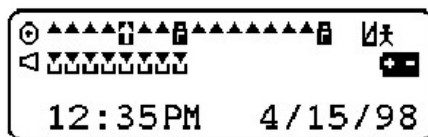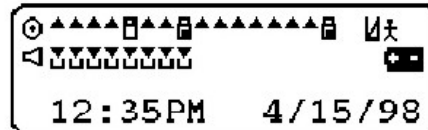



*"Your Source for Pagers"*

## Deleting Messages

### Deleting Messages

Press ◀ or ▶ to move the cursor to select the message you desire. Press Ⓞ to read the message.

Press || then press ◀ or ▶, to display "MESSAGE DELETE" Mode.

When "MESSAGE DELETE" is displayed on the screen, press || to show "MESSAGE DELETE ?" on the screen, If you want to delete then press **93** to delete the message. If you do not want, press Ⓞ to quit.

Ⓞ 05:Pls Call818-123456  
◀ 7,Divid.  
[112:30 PM 4/12

Ⓞ 05:Pls Call818-123456  
◀ 7,Divid.  
MESSAGE DELETE  
↑ 🔒 🗑️ 📧

Ⓞ 05:Pls Call818-123456  
◀ 7,Divid.  
MESSAGE DELETE ?

||

Ⓞ ▲▲▲▲ 🔒▲▲▲▲▲▲▲▲▲▲ 🔒 🗑️ 📧  
◀ ██████████  
12:35PM 4/15/98

WaveWare Technologies, Inc. [www.wirelessmessaging.com](http://www.wirelessmessaging.com)

Customer Service: 1-800-373-1466 Tech Support: x109



*"Your Source for Pagers"*

 
## Deleting All Messages

### Deleting All Messages

( All unlocked and the read messages )

Press **||** then press **◀** or **▶** ,  
to " DELETE ALL " Mode .

Press **||** to show " DELETE  
ALL ? " on the screen. If you  
want to delete all messages  
then press **||** ,all unlocked  
and the read messages are  
deleted. If you do not want  
then press **⓪** to quit.

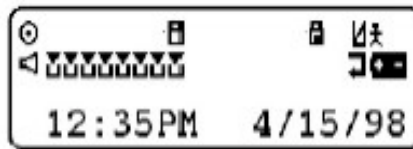



*“Your Source for Pagers”*

## Moving To Memo

### Move Message To Memo

 
Press ◀ or ▶ , to move the cursor to the desired storing message. Press || to read the message.



Press Ⓢ then press ◀ or ▶ , to move to " MOVE TO MEMO ".



Press || , to move the flashing icon message automatically into your memo mail .

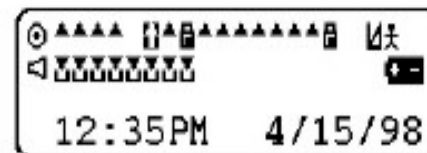



*“Your Source for Pagers”*


## Setting the Alert
 
### Setting Alert


Press **||** , then , press **◀** or **▶** once to display " SET ALERT " Mode .




Press **||** , to enable "SET ALERT".

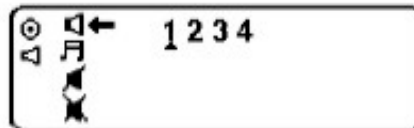

 Press **▲** or **▼** , to move the cursor to the desired alarm mode .(Alert **🔔** / Musical **🎵** / Vibration **📳** / Sleep **🛌** are optional )

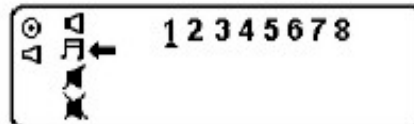

 Press **◀** or **▶** , to move to the cursor to the desired tone or music .

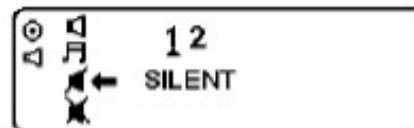






*“Your Source for Pagers”*

## Setting the Alert Cont.

   Press **⏏** setting the alert is completed. Press **⏏** to quit.

The **🔊** or **🎵** symbol is displayed if the message receiver is in the audible or musical mode .

The **🔊** or **🎵** symbol won't display on screen if the receiver is in the silent mode or sleep mode.

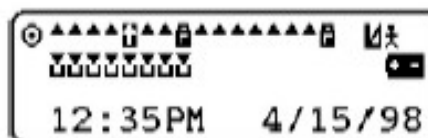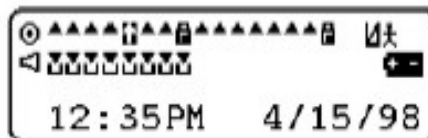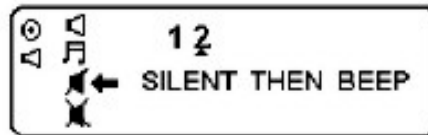



*“Your Source for Pagers”*


## Pager On / Off
 
### Turning Your Pager Off

Press **||** , then , press **◀** or **▶** ,  
to " PAGER OFF " mode.



Press **||** , till " PAGER OFF ? "  
appears on the screen.

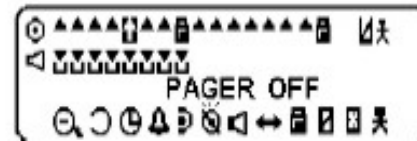

Press **||** , to turn the pager  
off .



After turning your pager off ,  
the screen will be empty.

Press **⓪** , to turn the pager  
power on.





*"Your Source for Pagers"*

## Setting Auto Sleep

### Setting Auto Sleep

 
 
 
 
Press **II**, then, press **◀** or **▶** to display " Auto Sleep " mode.  
 Press **II**, to enable " Auto Sleep Set " Mode.

Press **▲** or **▼** to select "open" or "close" (symbol **⌘** or **-** ) and adjust the digits, press **◀** or **▶** for moving the cursor.

Press **II** setting auto sleep mode is completed. The screen returns to stand-by status.

**⌘** is displayed when the Auto Sleep mode is set.

The enable **zZ** symbol indicates your pager is during setting status.

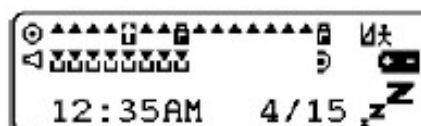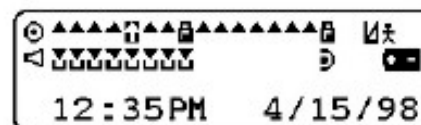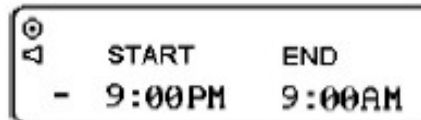






*“Your Source for Pagers”*

## Setting the Alarm
 
### Setting Alarm ( 5 alarms )

Press **||** , then , press **<** or **>** to "SET ALARM "Mode.  
 Press **||** , to enable.  
 Press **<** or **>** , to move the cursor.  
 Press **▲** or **▼** , to set the alarm status either alarm enabled , alarm disabled or set time.  
 Press **||** setting the alarm is completed. Press **⏏** to quit.

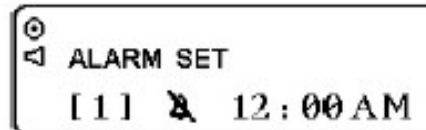



*“Your Source for Pagers”*

## Setting Time and Date

 
### Setting Time And Date

Press **II**, then , press **◀** or **▶** once until "SET TIME " Mode is displayed.




Press **II**, to enable set time. .

Press **◀** or **▶**, to move the cursor to the hour / minute digit .Then press **▲** or **▼** adjust each set of digits : AM/ PM/24 hr / month / day.

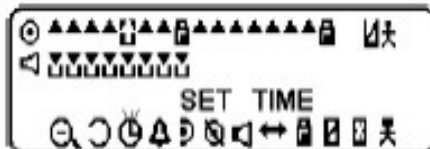

 Press **II** to activate the time and date change. Press **⏻** to quit.

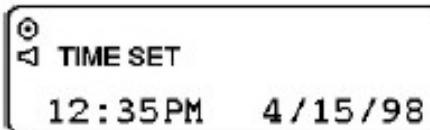



*"Your Source for Pagers"*

## Setting the Scroll

### Setting Scroll

 
 
 
 
 
 
Press **||** , then , press **◀** or **▶** ,  
to " SET SCROLL " Mode .

Press **||** , to enable scroll  
automatically.

Press **▶** to set speed high,  
press **◀** to set speed low or  
off the auto scroll function.

- (1) █ -- Slow.
- (2) █ █ -- Middle.
- (3) █ █ █ -- Fast.
- (4) X ----- Off.

When the Auto scroll is set,  
the **↻** symbol is displayed  
on screen.

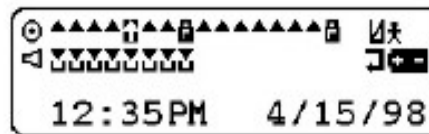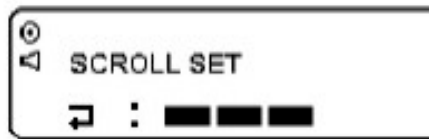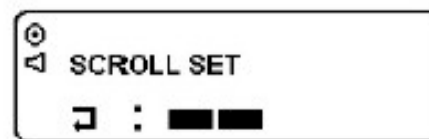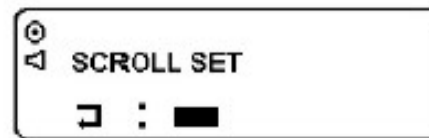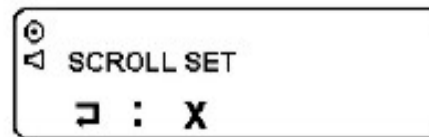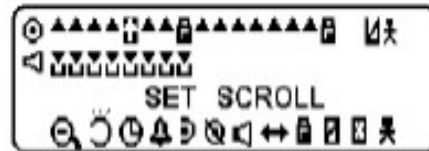



*"Your Source for Pagers"*

## Setting Zoom

 
 
### Setting Zoom In / Zoom Out

Press **||** ,then press **◀** or **▶**,  
to "ZOOM IN".(symbol **⊕** ),  
Then, press **||** to confirm..

The letters on screen enlarge  
and become two lines to read.

Or press **◀** or **▶** to move the  
cursor again to " ZOOM OUT  
" (symble **⊖** ), and press **||**  
to complete.

The letters on screen change  
to four lines to read.

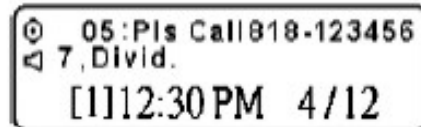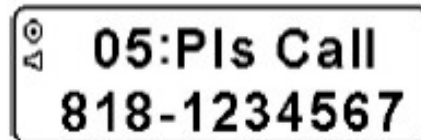



*“Your Source for Pagers”*


## Reading Mail Drop
 
### Reading Mail Drop

Press ▼ to move the flashing icon in the second row.

Press ⏸, to read message or press ◀ or ▶, to move the icon to the desired Mail drop.

The features allows 14 sets Mail Drop

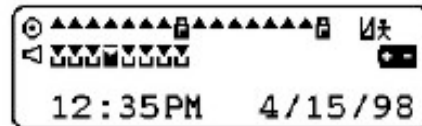



*"Your Source for Pagers"*




## Moving the Cursor
   
### Moving the Cursor

Press ◀ or ▶ to move cursor to the █ icon flashes, indicating the present position of the message you are going to read.

Press ▼ to move cursor to the second row; "MAIL DROP AREA".

Press ▲ to move the flashing icon to the top row; "MESSAGE AREA".

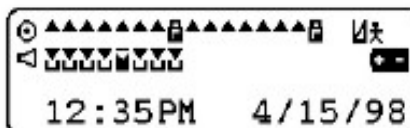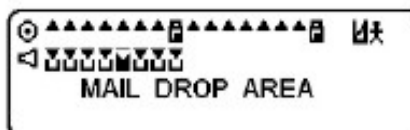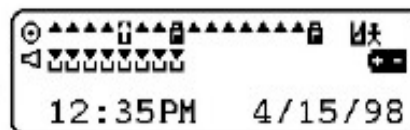




## Reading Personal Message

*"Your Source for Pagers"*



### Reading Personal Message

 Press ◀ or ▶, to move the flashing icon to the ✉ symbol.

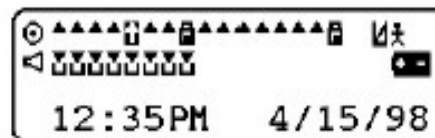

Press ⏻, to read message.

  When the ✉ symbol is shown in the top left-hand corner of the display, this indicates the message status as a personal message.

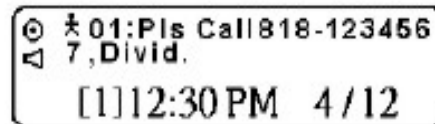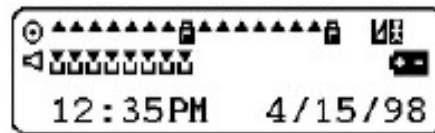





*"Your Source for Pagers"*

## Reading Full Message

 
### Reading Full Message

Press ◀ or ▶ , to move the flashing icon to the 𐀀 symbol.



Press ⏻ , to read message.

When the 𐀀 symbol is shown in the top left-hand corner of the display ,it indicates the message status as a full message.

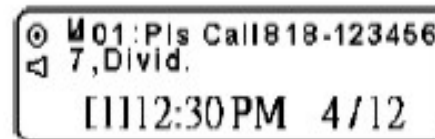






*"Your Source for Pagers"*


## Backlight / Duplicate



### Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

### Duplicate Message

When the pager receives a duplicate message, only the latest message will be displayed on the LCD screen.

The  symbol shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".

 05:Pls Call 818-123456  
 7,Divid.  
 [1]12:30 PM 4/12

 


*“Your Source for Pagers”*

## Error Message / Battery Gauge



### Error Message

If the error message is received. The ☒ symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.



### Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from (full), (1/2), (low). Whenever the low battery shows on display, Please replace the new battery to make sure the pager is in receivable condition.

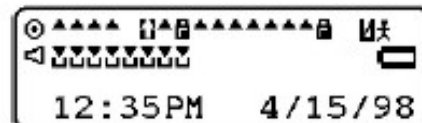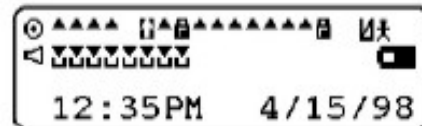



*"Your Source for Pagers"*

## Set Mail Drop Alert

 
### Set Mail Drop Alert

Press **▼** to move the cursor to the "MAIL DROP AREA"..

Press **||** , to display the function menu.

Press **◀** or **▶** , to move the cursor to set mail drop alert, "CHIRP ON". If you already turned on the alert, the screen will show "CHIRP OFF". **||**

Press **Ⓢ** , to activate the function .Or press **Ⓛ** , to exit the function .

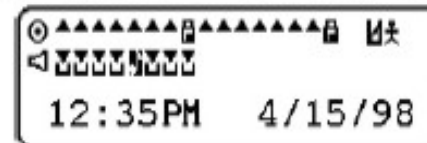



*"Your Source for Pagers"*

## Set Mail Drop History

### Set Mail Drop History

The user could select how many sets they want under "Mail Drop" cursor.

Move the cursor to "MAIL DROP AREA".

Press **||** then press **▶** to the "SET HISTORY"

Press **||** to into select "Sets".

Press **◀** or **▶** to move the "▲". When you move the "▲" to under "5", it means you select 5 sets under this cursor. Move to "8", means 8 sets.

Press **||** to confirm your setting.

