
APOLLO ALPHANUMERIC SYNTHESIZED PAGER BUTTON PROGRAMMING INSTRUCTIONS

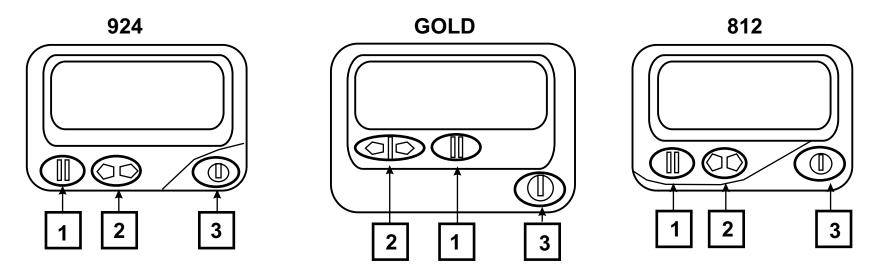

- **1)** TO PROGRAM PAGERS, REMOVE BATTERY AND HOLD DOWN BUTTON **1** WHILE YOU RE-INSERT THE BATTERY. HOLD BUTTON UNTIL "PASSWORD" OR "FREQUENCY" SHOWS IN THE DISPLAY.
- 2) IF "PASSWORD" IS SHOWN, PRESS BUTTON 3 TO MOVE TO THE FREQUENCY SCREEN.
- 3) TO CHANGE FREQUENCY: PRESS BUTTON 1 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON
 2 TO MOVE THE CURSER TO THE NEXT POSITION TO THE RIGHT. WHEN THE FREQUENCY IS COMPLETE, PRESS THE 3 BUTTON TO CHANGE TO THE CAP CODE SCREEN.
- 4) BUTTON 1 WILL TURN ON/OFF THE CAP CODE SLOT. TO CHANGE THE CAP CODE: FOLLOW THE STEPS ABOVE TO CHANGE THE NUMBERS AND PRESS BUTTON 3 TO CHANGE TO THE NEXT CAP CODE SCREEN. IN MOST CASES THE 4 DIGITS AT THE END OF THE CAP CODE SHOULD BE ALL "A"S.
- 5) BAUD RATE (POCSAG ONLY)- TO CHANGE THE BAUD RATE: PRESS THE 1 BUTTON TO CHANGE BETWEEN 512,1200,2400. PRESS BUTTON 3 TO MOVE TO THE "MODIFY PASSWORD" SCREEN. NOTE: THE BAUD RATE SCREEN IS NOT AVAILABLE ON THE FLEX MODELS.
- 6) TO MODIFY THE PASSWORD "0000"- (THIS IS THE LAST SCREEN): A PASSWORD CAN BE ENTERED HERE TO PROTECT THE PAGER. USE BUTTON 1 TO CHANGE THE NUMBER AND BUTTON 2 TO MOVE THE CURSER TO THE NEXT NUMBER TO THE RIGHT. PRESS BUTTON 3 WHEN DONE.
- 7) THE PAGER WILL BEEP AND SHOW "PASS", THIS CONFIRMS THAT THE PROGRAMMING HAS BEEN ACCEPTED.
- **NOTE:** After programming the pager thru the buttons, please remove and re-install the battery.